

## User Guide

Thank you for purchasing a SKOPE refrigeration product.

### Safety

Always observe safety precautions when using any electrical appliance. Read these instructions carefully and keep them for future reference.

#### WARNING

- Always position the appliance so that the power plug is accessible and easily reached.
- Ensure the appliance is disconnected from the power supply before performing any cleaning or maintenance.
- Do not cover the grilles or block the entry or exhaust of airflow by placing objects up against the refrigeration unit.
- Should manual defrosting be necessary, turn off the refrigeration system and allow the ice to melt by air circulation. Collect ice and water during defrost to prevent a slip hazard. Do not use mechanical methods to remove ice, as this may damage the refrigeration circuit.
- Do not use any electrical devices or appliances inside the food storage compartment.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not use this appliance for other than its intended use.
- Do not insert fingers/foreign objects into any holes.
- Only use this appliance with the voltage specified on the cabinet rating label.
- Ensure the appliance has adequate ventilation as this is essential to economical, high performance.
- Be careful not to touch moving parts and hot surfaces.
- For your own safety and that of others, ensure that all electrical work is done by authorised personnel.
- If the power supply flexible cord becomes damaged, it must be replaced by an authorised service agent or similarly qualified person in order to avoid a hazard.
- If installing or removing the refrigeration cabinet, refer to the Installation Guidelines below, and observe all necessary safety precautions.
- The appliance is not designed to be stable while in motion. Use extreme caution when moving or transporting it.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- If the cabinet is to be scrapped, ensure the cabinet is unplugged from the power supply and cut off the mains flex close to the back of the cabinet. Be mindful of the risk of animals or children becoming trapped in the appliance – either remove or secure the doors.
- Refrigerant must be removed by a qualified service person and the cabinet recycled/disposed of in accordance with local regulations.
- When moving the cabinet:
  - Roll the cabinet carefully on the castors at the back.
  - Always move the cabinet slowly, and with care.

This cabinet is designed to operate within a specific climatic class environment.  
See the cabinet rating label inside the cabinet for climate class number.

Climate class	Ambient temperature	Relative humidity
3	25°C	60%
4	30°C	55%
5	40°C	40%
7 (tropical)	35°C	75%

The cabinet includes relevant hazard symbols that may be associated with the cooler. Refer to the information below for symbol description.

 


#### WARNING

The refrigeration system contains flammable R290 refrigerant. Do not tamper with it.  
The refrigeration system must only be serviced by qualified personnel.


## Installation Guidelines

Ensure you consider and meet the installation guidelines below.

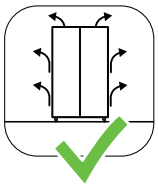


### Ventilation

 Ensure all ventilation requirements below are met.

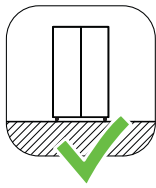

### Surface

 The installation surface must be capable of supporting the loaded cabinet.

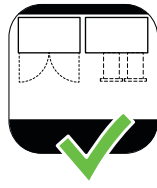



### Door/Drawer Opening

Allow adequate space for the door/s and/or drawer/s to open and close properly.




### Climate Class

  The cabinet must be installed in an environment within its climate class which is stated on the cabinet rating label inside the cabinet, and explained on the front page of this user guide.

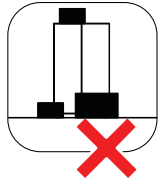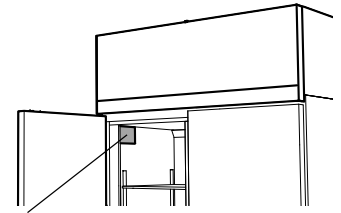


### Blocking Ventilation

 Do not store boxes or items in front or on top of the cabinet.

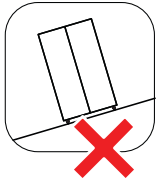


### Uneven Surface

 Do not install the cabinet on an uneven surface.

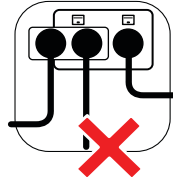

### Power Supply

 Do not overload the power supply.

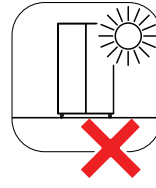


### Sunlight

Do not install the cabinet in direct sunlight.

## Ventilation Requirements


This cabinet must have the following ventilation clearances at all times:
 
### Freezer Stations

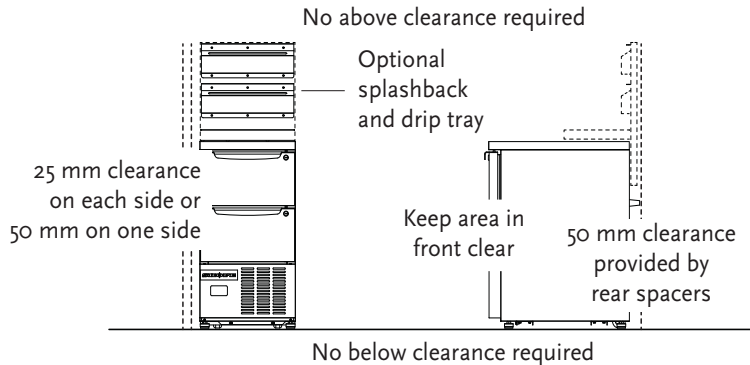

## Drawers

 Remove the drawers for cleaning. Pull the drawer out of the cabinet, release the latches at the side of drawer as shown, and lift the drawer out at an angle. You can also remove the drawer slider by releasing the side catches as shown. Reverse the operation to refit the drawers to the cabinet after cleaning.

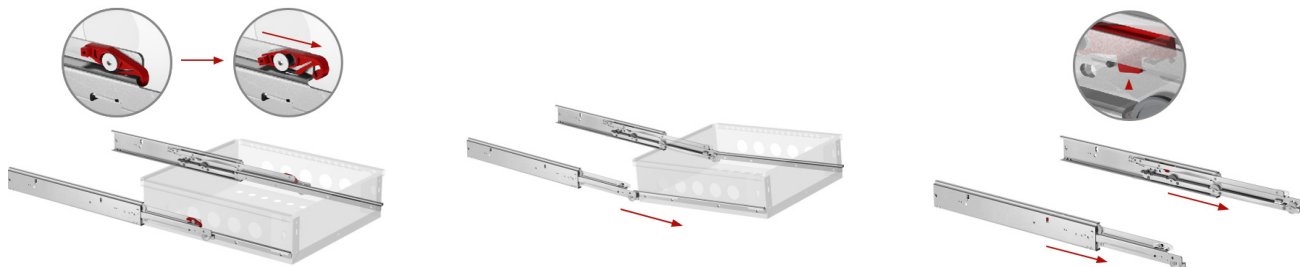

**Important:** If using Gastronorm pans, SKOPE recommends using a Gastronorm bar to stop the pans moving around and damaging the drawers.

## Lock/s

The cabinet is fitted with key locks, which can be operated with the supplied key.

## Lights

The cabinet is not lit.

## Electronic Controller

The electronic controller regulates the cabinet internal temperature, signals alarms and captures operational information. The internal temperature is set at the factory for storing perishable product. To customise the settings to your requirements and view historical data, download the SKOPE-connect app from the Google Play Store or Apple App Store, and connect via Bluetooth wireless technology.



Apple App store



Google Play store

## Loading Product

Always turn on the cabinet and let it cool down to the proper operating temperature of  $-21^{\circ}\text{C}$  (~2 hours) before loading the product.

## Weight Limits

- 1-drawer Freezer Station: with the front feet fully extended, the maximum load is **35 kg**.
- 1-drawer Freezer Station: with the front feet fully extended, the maximum load is **20 kg** per drawer.

## Optional Splashback and Drip Tray

 
### Splashback

Attach the splashback to the rear of the cabinet with the 6 × supplied sems screws.

SKOPE recommends using a sealant between the splash back and the top of the freezer station to prevent a food trap.

### Drip Tray

Place the drip tray on the benchtop in the centre of the benchtop against the splashback. It has 4 × silicon feet which provide grip.

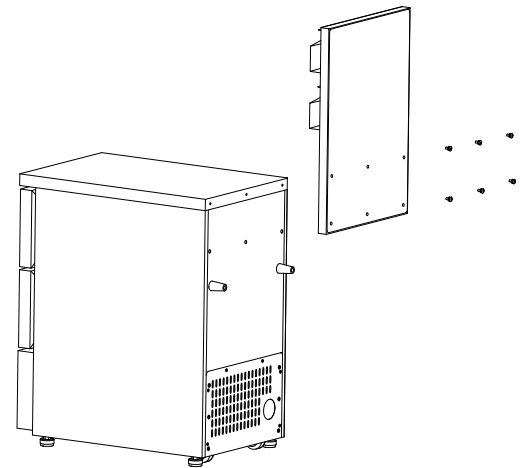

## Defrosting

To ensure efficient operation, always defrost the cabinet once a week. If the weekly defrost is not performed, excessive ice build-up may reduce performance, cause tray overflow, and prevent drawers from opening properly.

### CAUTION

Ensure you collect ice and water during the defrost to prevent a slip hazard.

Do not use mechanical methods (scraping or chiselling) to remove ice, as this may damage the refrigeration circuit.

### To defrost the freezer station

1. Disconnect the cabinet from the mains power supply.
2. Remove all the product from the cabinet, and move to another freezer to keep it frozen.
3. Melt the frost.
  - Allow the freezer to stand at room temperature until the ice melts naturally, preferably with the drawers opened.
  - Remove the drawers (see “Drawers” on page 2).
  - Remove any loose frost using a soft cloth or plastic scraper (do not use knives or other sharp tools).
4. Collect and discard the water.
  - Use a sponge or soft cloth to absorb the melted water inside the cabinet. Ensure any remaining water flows toward the drain opening so it is properly collected in the condensate tray.
  - Make sure no food particles or debris go down the drain. This will prevent blockages and ensure water is removed properly.
5. Clean and dry the inside of the cabinet.
  - Wipe all surfaces with a soft cloth. Do not use harsh abrasive cloths or cleaners.
  - Ensure the cabinet is completely dry to stop new ice forming.
6. Reassemble and restart the freezer.
  - Refit the drawers (see “Drawers” on page 2).
  - Reconnect the cabinet to the mains power supply.
  - Let the freezer cool down to the proper operating temperature ( $-21^{\circ}\text{C}$ ) before reloading product.

## Cleaning

### Before First Use

You must thoroughly clean and sanitise the cabinet interior and food contact surfaces, such as the worktop, before first use. Unplug the cabinet from the mains power supply before cleaning, and use only standard stainless steel cleaners suitable for food preparation areas. If required, clean the outside of the cabinet as instructed on the back page of this user guide.

### Routine Cleaning

Ensure the cabinet is unplugged from the power supply before cleaning.

#### IMPORTANT:

- Do **not** use abrasive, corrosive or solvent-based cleaners, as they could damage the protective coating on the door or drawer.
- Do **not** apply hot water, blow dry or place the filter in the dishwasher.

Wipe the outside of the cabinet, including the door gasket, with warm water and a soft cloth, and the inside of the cabinet with standard stainless steel cleaners suitable for food preparation areas. Take care to keep moisture away from electrical parts.

The condenser coil must be kept clean. SKOPE strongly recommends cleaning the condenser coil and air filter monthly. Do **not** use hard or sharp tools to clean the coil as these may cause damage.

### To clean the condenser coil and filter

---

#### Before you start

- The filter and condenser coil are located behind the cartridge cover panel.
- The cartridge cover panel connections include:
  - Top: 2 × tabs connecting into 2 × slots in the bottom of the benchtop
  - Bottom: 2 × Phillips head screws and 1 × flange

1. Disconnect the cabinet from the mains power supply.
  2. Remove the cartridge cover panel.
    - Undo the 2 × screws at the bottom of the cartridge cover panel.
    - Detach the flange by gently pulling the panel outwards from the base.
    - Slide the panel down to remove the tabs from the slots in the base of the benchtop.
  3. Clean the filter with a vacuum cleaner, wash with cold water and shake off any excess water.
    - Do **not** apply hot water, blow-dry or place in a dishwasher.
    - If necessary, discard and refit a new filter.
  4. Clean the condenser coil by brushing it with a soft brush to remove any dust and fluff.
  5. Refit the condenser filter.
  6. Reassemble the cabinet and check for correct operation.
- 
- 

### To clean the optional splashback and drip tray

---

#### Before you start

Do not use steel wool, scouring pads, or abrasive, corrosive or solvent-based cleaners, as they could damage the stainless steel.

1. Disconnect the cabinet from the mains power supply.
  2. Cool the splashback and drip tray completely before cleaning.
  3. Remove the drip tray from the benchtop.
  4. Wipe away excess food and oil using a soft cloth or paper towel.
  5. Wash with warm water and mild detergent using a non-abrasive sponge or soft brush.
  6. Rinse thoroughly with clean water.
  7. Dry immediately with a soft cloth.
  8. For stubborn residue, use a food-safe stainless steel cleaner and follow the manufacturer's instructions.
- 
- 

## Service and Support

We know you will get years of satisfaction from your new SKOPE product when you follow a few simple preventative maintenance guidelines.

Helpful information is available on the SKOPE website: [www.skope.com/after-sales-support](http://www.skope.com/after-sales-support)

